SINNER

LENS CHANGE MANUAL





To remove the lens, hold the central part of the frame in one hand, and the grabb the lens using the other hand.



Gently pull the lens downwards at the inner part closest to the nose pad.

STEP 2.



STEP 3.

To insert the new lens, position the lateral pegs in the corresponding holes in the frame.



STEP 4.

After positioning the lens along the outher edge, push in the central part between lens and frame until it clicks into the frame.

PERFORMANCE SERIES

SINNER ASTAM SINNER ASTAM